Autonics

ANALOG TIMER AT8N

FL (E



Thank you very much for selecting Autonics products. For your safety, please read the following before using.

Caution for your safety

*Please keep these instructions and review them before using this unit.

*Please observe the cautions that follow;

Warning Serious injury may result if instructions are not followed.

⚠ Caution Product may be damaged, or injury may result if instructions are not followed. ★The following is an explanation of the symbols used in the operation

∆ caution: Injury or danger may occur under special conditions

∧ Warning

- 1. In case of using this unit with machineries(Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc), it requires installing fail-safe device, or contact us for information required. It may result in serious damage, fire or human injury
- 2. The unit must be mounted on panel.

It may give an electric shock.


- 3. Do not connect terminals when it is power on.
- It may give an electric shock
- 4. Do not disassemble and modify this unit, when it requires. If needs, please contact us.

It may give an electric shock and cause a fire

⚠ Caution


- 1. This unit shall not be used outdoors.
- It might shorten the life cycle of the product or give an electric shock.
- 2. Please observe specification rating.
- It might shorten the life cycle of the product and cause a fire.
- 3. Do not use the load beyond rated switching capacity of Relay contact.
- It may cause insulation failure, contact melt, contact failure, relay broken fire etc.
- 4. In cleaning the unit, do not use water or an organic solvents.
- It might cause an electric shock or fire that will result in damage to the product
- 5. Do not use this unit at place where there are flammable or explosive gas, humidity, direct ray of the sun, radiant heat, vibration, impact etc.
 - It may cause a fire of mechanical trouble.
- 6. Do not inflow dust or wire dregs into inside of this unit. It may cause a fire of mechanical trouble

Ordering information

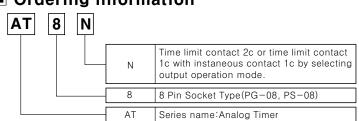


*The above specification are changeable without notice anytime.

 Dimensions



Front panel identification

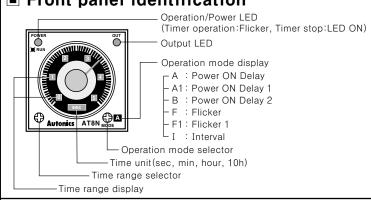

Time specifications


Time range	Time unit	Time setting range
0.5	sec	0.05 to 0.5
1.0		0.1 to 1.0
5		0.5 to 5
10		1 to 10
0.5	min	0.05 to 0.5
1.0		0.1 to 1.0
5		0.5 to 5
10		1 to 10
0.5	hour	0.05 to 0.5
1.0		0.1 to 1.0
5		0.5 to 5
10		1 to 10
0.5	10h	0.05 to 0.5
1.0		0.1 to 1.0
5		0.5 to 5
10		1 to 10

Specifications


Model		AT8N	
Control time setting range		0.05sec to 100hour(Max. time)	
Power supply		• 100-240VAC(50/60Hz), 24-240VDC • 12VDC(Option)	
Allowable voltage range[]		90 to 110% of rated voltage□	
Power consumption		• 100-240VAC: Approx. 4.5VA, 24-240VDC: Approx. 1.5W • 12VDC: Approx. 0.6W	
Return time[]		Max. 100ms	
Control output	Type	Time limit contact 2c or time limit contact 1c with instaneous contact 1c by selecting output operation mode	
	S Capacity	NO:250VAC 3A resistive load, NC:250VAC 2A resistive load	
Repeat error		Max. ±0.3%	
Setting error		Max. ±5% ±0.05sec	
Voltage error		Max. ±0.5%	
Temperature error		Max. ±2%	
Insulation resistance		Min. 100MΩ (500VDC mega between all terminals and case)	
Dielectric stength		2000VAC 50/60Hz for 1 minute (Between all terminals and case)	
Noise strength		± 2 kV the square wave noise(pulse width:1 μ s) by the noise simulator	
Vibra -tion	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 1 hours	
	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 10 minutes	
Shock	Mechanical	300m/s² (Approx. 30G) 3 times at X, Y, Z direction	
	Malfunction	100m/s ² (Approx. 10G) 3 times at X, Y, Z direction	
Relay	Mechanical	Min.10,000,000 times	
life cycle	Electrical	Min.100,000 times (NO:250VAC 3A resistive load, NC:250VAC 2A resistive load)	
Ambient temperature		-10 to 55℃(at non-freezing status)	
Storage temperature		-25 to 65℃(at non-freezing status)	
Ambient humidity		35 to 85%RH	
Weight		Approx. 100g	
Approval		<i>₹1</i> (€	

Connections

•[A], [F] output operation mode

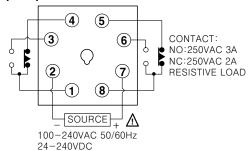


●[A1], [B], [F1], [I] output operation mode

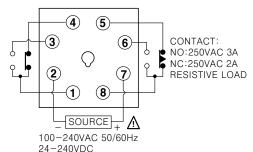


Time chart

Output operation mode

Mode

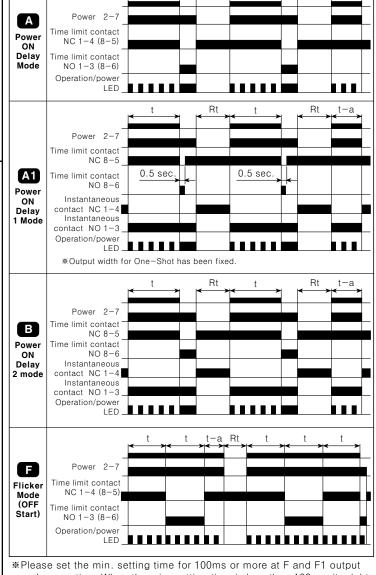


mode operation. When the min, setting time is less than 100ms, it might not be operating normally due to relay contact reaction time.

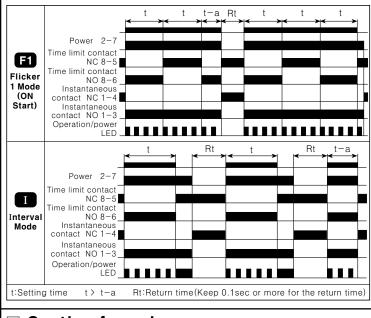

Caution for using

 - 1. When apply the power, please apply rating power at the moment by switch, relay etc. Otherwise it might cause malfunction.
- 2. Do not use this product for long time. It may cause shorten life cycle of Timer due to heat inner electric component.
- 3. Please connect DC power input after checking polarity of power.
- 4. When supply the power to the Timer, connection as shown in (Fig.1). It might cause malfunction due to leakage current through R and C. Please connect R and C as shown in (Fig.2) to prevent malfunction



- 5. It might cause malfunction if change the setting time, time range or operation mode during unit operating. Please change the setting time, time range or operation mode after cut the power off. 6. When test dielectric voltage and insulation resistance of the control
- panel with this unit installed
- 1) Please isolate this unit from the circuit of control panel.
- @Please make all terminals of this unit short-circuited.
- 7. Do not use this unit at below places.
- 1) Place where there are severe vibration or impact.
- ²Place where strong alkalis or acids are used.
- 3 Place where there are direct ray of the sun
- 4 Place where strong magnetic field or electric noise are generated.
- 8. Installation environment
- 1 It shall be used indoor ②Altitude Max. 2000m
- ③Pollution Degree 2
- 4 Installation Category II
- **XIt may cause malfunction if above instructions are** not followed.

Main products

■ COUNTER

■ TEMPERATURE CONTROLLER

■ PANEL METER

■ TACHOMETER/

LINE SPEED METER/ PULSE METER

■ DISPLAY UNIT

PROXIMITY SENSOR

■ PHOTOELECTRIC SENSOR

■ FIBER OPTIC SENSOR ■ PRESSURE SENSOR

■ ROTARY ENCODER

■ SENSOR CONTROLLER

■ POWER CONTROLLER ■ STEPPING MOTOR & DRIVER & CONTROLLER

AUTONICS Corporation http://www.autonics.net

■ HEAD QUARTER

41-5, Yongdang-ri, Ungsang-eup, Yangsan-si Gyeongnam, Korea 626-847

■ INTERNATIONAL SALES:

512 Ansung B/D, 410-13, Shindorim-dong, Guro-gu, Seoul, Korea 152-070 TEL:82-2-2679-6585 / FAX:82-2-2679-6556

■ E-mail: sales@autonics.net

NO20030215-EP-KE-02-041B