

## MODEL CUB4L - MINIATURE ELECTRONIC 6-DIGIT COUNTER



- ✓ LCD, POSITIVE REFLECTIVE OR NEGATIVE TRANSMISSIVE WITH YELLOW/GREEN OR RED LED BACKLIGHTING
- ✓ 0.48 INCH (12.2 mm) HIGH DIGITS
- ✓ INTERNAL LITHIUM BATTERY PROVIDES UP TO 10 YEARS OF UNINTERRUPTED OPERATION
- ✓ NEMA 4X/IP65 SEALED FRONT BEZEL
- ✓ FRONT PANEL RESET, REMOTE RESET, OR BOTH
- ✓ COUNT SPEEDS UP TO 5 KHz (High speed input)
- ✓ WIRE CONNECTION MADE VIA SCREW CLAMP TYPE TERMINALS
- ✓ COUNT INPUT VOLTAGE UP TO +28 VDC



### DESCRIPTION

The CUB4L is the newest addition to the Micro-Line series of counters. These new CUB's offer large 0.48 inch high digits in the LCD, which is available in Positive Image Reflective (*CUB4L000*), Negative Image-Transmissive with yellow/green backlighting (*CUB4L010*), or Negative Image-Transmissive with red backlighting (*CUB4L020*).

The backlight versions require power from an external 9 to 28 VDC supply. The optional power supply (*MLPS0000*) is designed to be attached directly to the rear of a CUB4L and is powered from a 115/230 VAC source. This supply will provide power for the backlighting of the unit and a sensor.

These new Cub's can be mounted into the same panel cut-out as the CUB2 series of products. The CUB4L counters are manufactured using a CMOS LSI counter circuit chip, mounted on a gold-plated substrate, which is electrically connected by ultrasonic wire-bonding. Use of proven micro-electronic assembly and manufacturing techniques provides these units with the reliability and dependability required for industrial service.

The CUB4L series has a lightweight, high impact plastic case with a clear viewing window. The sealed front panel with the silicone rubber reset button meets NEMA 4X/IP65 specifications for wash-down and/or dusty environments, when properly installed.

### SAFETY SUMMARY

All safety related regulations, local codes and instructions that appear in the manual or on equipment must be observed to ensure personal safety and to prevent damage to either the instrument or equipment connected to it. If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

### SPECIFICATIONS


- DISPLAY:** 6-Digit, LCD, 0.48" (12.2 mm) high digits.
- POWER SOURCE:** Internal 3.0 V lithium battery to provide up to 10 years of continuous operation. Battery life is dependent upon usage. Count and reset contacts that remain closed for long periods of time will reduce battery life.
- BACKLIGHT POWER REQUIREMENTS:** 9 to 28 VDC, 35 mA typical, 50 mA max. Above 26 VDC, derate operating temperature to 50°C. Must use the MLPS or a Class 2 or SELV rated power supply.
- INPUTS (All):**  $V_{IH}$  (high) = +4.0 V min. (28.0 V max)  
 $V_{IL}$  (low) = 0.5 V max.
- HIGH SPEED INPUT:** 5 KHz from 4.0 V to 28.0 V bipolar output with a 50% duty cycle.
- LOW SPEED INPUT:** 50 Hz from switch contact or open collector transistor with a 50% duty cycle.  
*Note: These units operate with VCM (A through D) modules.*
- REMOTE RESET:** 15 msec min. pulse width (active low) from 4.0 V to 28.0 V bipolar output or an open collector transistor or a switch contact to common.
- ENVIRONMENTAL CONDITIONS:**
  - Operating Temperature:** 0 to 60°C (above 50°C, derate backlight operating voltage to 26 VDC max.).
  - Storage Temperature:** -30 to 85°C
  - Operating and Storage Humidity:** 85% max. (non-condensing) from 0°C to 50°C.
  - Altitude:** Up to 2000 meters



**CAUTION:**  
Read complete instructions prior to installation and operation of the unit.

### DIMENSIONS "In inches (mm)"

Note: Recommended minimum clearance (behind the panel) for mounting clip installation is 2.15" (54.6) H x 3.00" (76.2) W.

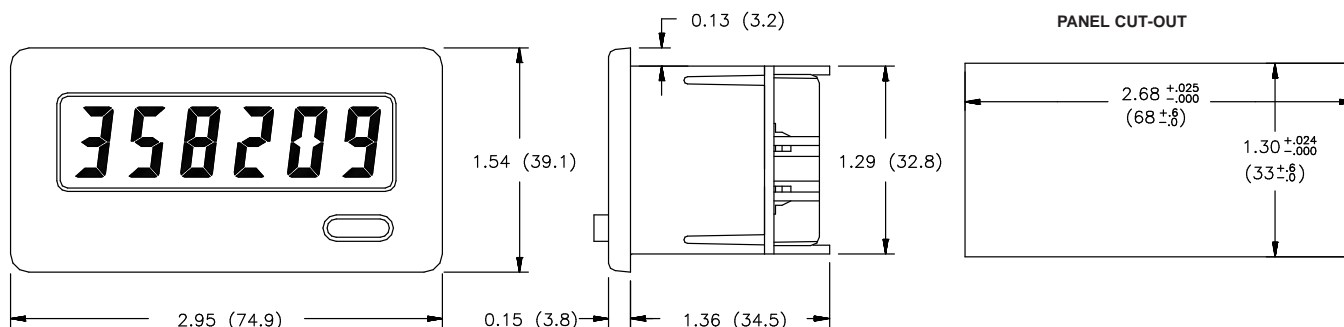

## SPECIFICATIONS (Cont'd)

### 9. CERTIFICATIONS AND COMPLIANCES:

#### EMC EMISSIONS:

Meets EN 50081-1: Residential, Commercial, and Light Industry  
CISPR 11 Radiated and conducted emissions

#### EMC IMMUNITY:

Meets EN 50082-2: Industrial Environment.  
ENV 50140 - Radio-frequency radiated electromagnetic field  
ENV 50141 - Radio-frequency conducted electromagnetic field <sup>1</sup>  
EN 61000-4-2 - Electrostatic discharge (ESD)  
EN 61000-4-4 - Electrical fast transient/burst (EFT)  
EN 61000-4-8 - Power frequency magnetic field

#### Note:

1. Cable shields connected to earth ground at both ends.

Test: RF Conducted Immunity I/O lines per ENV 50141

Refer to the EMC Installation Guidelines section of this bulletin for additional information.

### 10. CONSTRUCTION:

This unit is rated for NEMA 4X/IP65 indoor use. Installation Category I, Pollution Degree 2

### 11. WEIGHT: 3 oz. (85 grams)

## EMC INSTALLATION GUIDELINES

Although this unit is designed with a high degree of immunity to ElectroMagnetic Interference (EMI), proper installation and wiring methods must be followed to ensure compatibility in each application. The type of the electrical noise, source or coupling method into the unit may be different for various installations. In extremely high EMI environments, additional measures may be needed. The unit becomes more immune to EMI with fewer I/O connections. Cable length, routing and shield termination are very important and can mean the difference between a successful or a troublesome installation. Listed below are some EMC guidelines for successful installation in an industrial environment.

1. Use shielded (screened) cables for all Signal and Control inputs. The shield (screen) pigtail connection should be made as short as possible. The connection point for the shield depends somewhat upon the application. Listed below are the recommended methods of connecting the shield, in order of their effectiveness.

- a. Connect the shield only at the panel where the unit is mounted to earth ground (protective earth).
  - b. Connect the shield to earth ground at both ends of the cable, usually when the noise source frequency is above 1 MHz.
  - c. Connect the shield to common of the unit and leave the other end of the shield unconnected and insulated from earth ground.
2. Never run Signal or Control cables in the same conduit or raceway with AC power lines, conductors feeding motors, solenoids, SCR controls, and heaters, etc. The cables should be run in metal conduit that is properly grounded. This is especially useful in applications where cable runs are long and portable two-way radios are used in close proximity or if the installation is near a commercial radio transmitter.
  3. Signal or Control cables within an enclosure should be routed as far away as possible from contactors, control relays, transformers, and other noisy components.
  4. In extremely high EMI environments, the use of external EMI suppression devices, such as ferrite suppression cores, is effective. Install them on Signal and Control cables as close to the unit as possible. Loop the cable through the core several times or use multiple cores on each cable for additional protection. Install line filters on the power input cable to the unit to suppress power line interference. Install them near the power entry point of the enclosure. The following EMI suppression devices (or equivalent) are recommended:

#### Ferrite Suppression Cores for signal and control cables:

Fair-Rite # 0443167251 (RLC #FCOR0000)

TDK # ZCAT3035-1330A

Steward #28B2029-0A0

#### Line Filters for input power cables:

Schaffner # FN610-1/07 (RLC #LFIL0000)

Schaffner # FN670-1.8/07

Corcom #1VR3

**Note:** Reference manufacturer's instructions when installing a line filter.

5. Long cable runs are more susceptible to EMI pickup than short cable runs. Therefore, keep cable runs as short as possible.

## INSTALLATION ENVIRONMENT

The unit should be installed in a location that does not exceed the maximum operating temperature and provides good air circulation. Placing the unit near devices that generate excessive heat should be avoided.

The bezel should be cleaned only with a soft cloth and neutral soap product. Do NOT use solvents. Continuous exposure to direct sunlight may accelerate the aging process of the bezel.


Do not use tools of any kind (screwdrivers, pens, pencils, etc.) to operate the keypad of the unit.

### Installation

The CUB4 series of products meet NEMA 4X/IP65 requirements for indoor use, when properly installed. The units are intended to be mounted into an enclosed panel. The viewing window and reset button are factory sealed for a washdown environment. A sponge rubber gasket and mounting clip are provided for sealing the unit in the panel cut-out.

The following procedure assures proper installation:


1. Cut panel opening to specified dimensions. Remove burrs and clean around panel opening.
2. Carefully remove the center section of the panel gasket and discard. Slide gasket over rear of the unit to the back of the bezel.
3. Assemble nut fastener first and then mounting screw onto both sides of mounting clip. Tip of screw should not project from hole in mounting clip.
4. Install CUB4 unit through the panel cut-out until front bezel flange contacts the panel-mounted gasket.
5. Slide the mounting clip over the rear of the unit until the mounting clip is against the back of the panel. The mounting clip has latching features which engage into mating features on the CUB4 housing.  
*Note: It is necessary to hold the unit in place when sliding mounting clip into position.*
6. Alternately tighten each screw to ensure uniform gasket pressure. Visually inspect the front panel gasket. The gasket should be compressed about 75

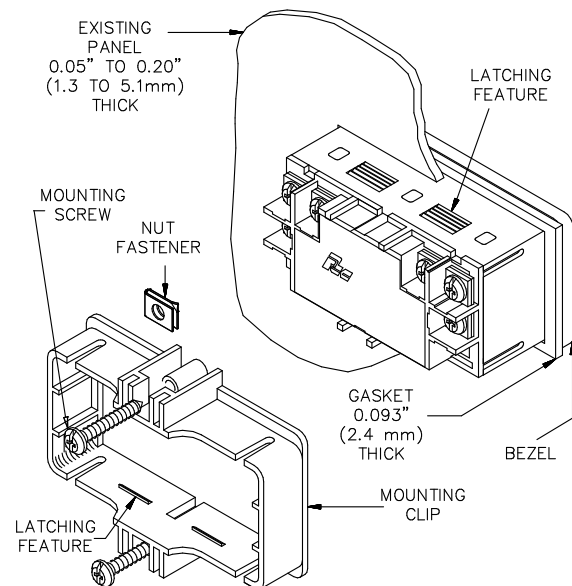

to 80% of its original thickness. (Recommended torque is 28 to 36 in.-oz.) If not, gradually turn mounting screws to further compress gasket.


7. If gasket is not adequately compressed, and mounting screws can no longer be turned, loosen mounting screws and check that mounting clip is latched as close as possible to panel. Repeat procedure for tightening mounting screws.

## LOW SPEED COUNT INPUT, 50 Hz MAX. [For 250 Hz see note in text]

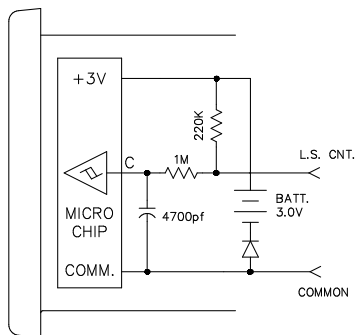


Pulling the "L.S. CNT." Input to Common with a mechanical or solid-state switch increments the counter. The low pass filter (1meg resistor and 4700pf cap) used with a Schmidt trigger circuit debounces mechanical switch signals. The switch load is 14  $\mu$ A (max. voltage drop 0.5 V) when ON. The OFF-state leakage current must be less than 2  $\mu$ A. Reed switches, mercury wetted contacts, snap action limit switches, and silver alloy relay


SWITCH  
CONTACT  
INPUT

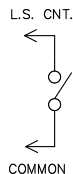

NPN  
O.C. TRANSISTOR  
OR (N) FET  
INPUT

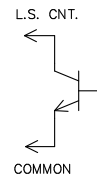


PNP  
O.C. TRANSISTOR  
OR (P) FET  
INPUT

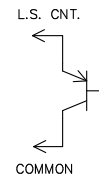

contacts with wiping action are usually satisfactory for generating count input signals. Motor starter contacts, tungsten contacts, and brush-type contacts should NOT be used.


*Note: By parallel connecting both "H.S. CNT." and "L.S. CNT." inputs, count speed can be increased to 250 Hz if debounce is not needed.*

## HIGH SPEED COUNT INPUT, 5 KHz MAX.

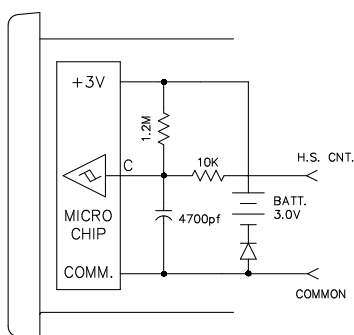


The "H.S. CNT." Input allows the CUB Counter to operate at speeds up to 5 KHz when driven by bi-polar outputs. Input drive voltage must be limited to 28.0 V maximum to avoid damage to the counter.


TTL  
OR CMOS  
OUTPUT

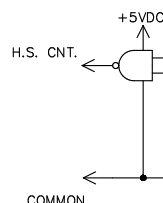

NPN  
O.C. TRANSISTOR  
OUTPUT

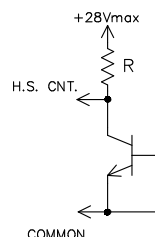

PNP  
O.C. TRANSISTOR  
OR BI-POLAR  
OUTPUT

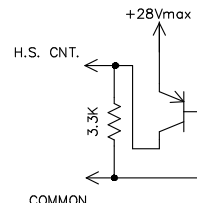


### INPUT PULSE EXCURSION LIMITS

$V_{IH}$  (High) = +4.0 V min., +28.0 V max.

$V_{IL}$  (Low) = +0.5 V max.


## RESET OPTIONS

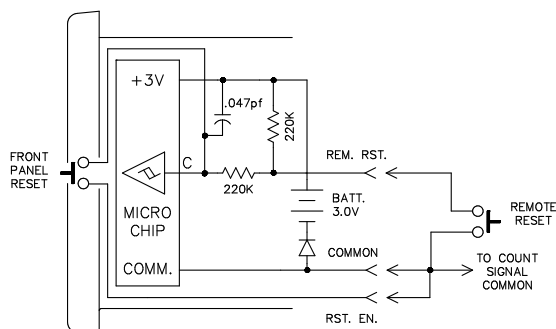

Connecting a wire from the "RST. EN." (Reset Enable) Input terminal to Common will enable the front panel Reset button. When Remote Reset is required, a wire is connected from the "REM. RST." input terminal to Common. Pulling this input low causes the counter to reset. The "REM. RST." can be pulled low by either a mechanical switch or solid-state transistor switch. Switch load and leakage are the same as for "L.S. CNT." Input above.

*Note: The RC protection circuit on the "REM. RST." Input causes a delay of approximately 15 msec in Reset response.*

## BACKLIGHT OPTION

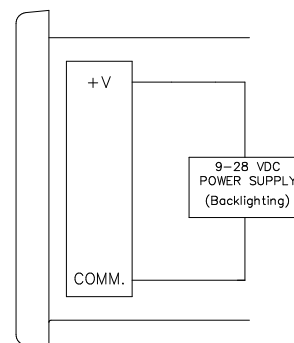


Optional backlight versions of the CUB4L require an external 9-28 VDC power supply. The external supply is connected between the V+ and Common terminals as shown in the drawing.

Red Lion Controls optional power supply (MLPS0000) is designed to be attached directly to the rear of a CUB4L and is powered from a 115/230 VAC source. The MLPS provides power for unit backlighting and a sensor.

## WIRING CONNECTIONS

The electrical connections are made via rear screw-clamp terminals located on the back of the unit. When wiring the unit, use the label to identify the wire position with the proper function. All conductors should meet voltage and current ratings for each terminal. Also cabling should conform to appropriate standards of good installation, local codes and regulations. It is recommended that power supplied to the unit (AC or DC) be protected by a fuse or circuit breaker. Strip the wire, leaving approximately 1/4" bare wire exposed (*stranded wires should be tinned with solder*). Insert the wire into the screw-clamp terminal and tighten down the screw until the wire is clamped tightly. Each terminal can accept up to two #14 AWG wires.

*Note: The CUB4L000 will **NOT** have a screw terminal installed at the V+ terminal, since it is **NOT** required for operation and is not internally connected. The CUB4LM00 uses the V+ screw terminal to mount the MLPS power supply. It is not internally connected to the unit.*

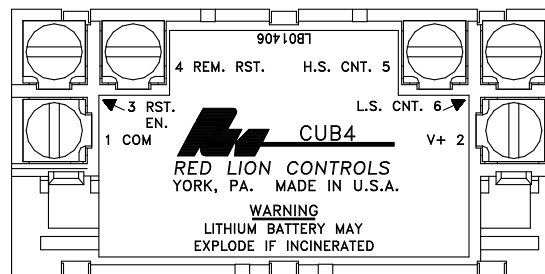

**Warning:** Lithium battery may explode if incinerated. Signal input voltage should not exceed 28.0 VDC to prevent damage to the counter.

## TROUBLESHOOTING

For further technical assistance, contact technical support at the appropriate company numbers listed.

## ORDERING INFORMATION

MODEL NO.	DESCRIPTION	PART NUMBERS
CUB4L	Counter Positive Image Reflective	CUB4L000
	Counter w/Yel-Grn Backlighting	CUB4L010
	Counter w/Red Backlighting	CUB4L020
	Counter Positive Image Reflective w/V+ Terminal	CUB4LM00
MLPS	Micro Line/Sensor Power Supply	MLPS0000
For more information on Pricing, Enclosures & Panel Mount Kits refer to the RLC Catalog or contact your local RLC distributor		