DIN W48×H48mm Digital timer


■Features

- ●Wide range of the time selection(0.01sec ~ 9999.9 hour)
- ●Power supply: 100-240VAC 50/60Hz, 12-24VAC/DC(Option)
- Memory protection: 10 years(When using non-volatile semiconductor memory)
- ●Built-in Microprocessor
- •8 Pin plug connection type





Ordering information

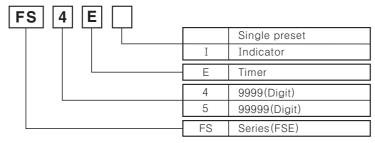

■ Specifications


Model		FS4E	FS5EI	
Function		Single preset Up/Down Timer	Up/Down indicator	
Character size		W4×H8mm		
Power supply		100-240VAC 50 /60Hz, 12-24VAC/DC		
Allowable voltage range		90 ~ 110% of rated voltage		
Power consumption		Approx. 4.5VA(240VAC 60Hz), Approx. 2.5W(24VDC)	Approx. 3.5VA(240VAC 60Hz), Approx. 2.2W(24VDC)	
Reset time		Max. 500ms		
Min. inp	ut RESET input	Approx. 20ms		
signal wi	dth INHIBIT input			
Input	RESET input	No-voltage input ☞ Impedance at short-circuit : Max. 470Ω, Residual voltage at short-circuit : Max. 1VDC		
Input	INHIBIT input	Impedance at open circuit: Min. 100kΩ		
One-sho	t output time	0.05~5sec		
Control	Contact type	Time-limit SPDT(1c)		
output	Contact capacity	250VAC 3A at resistive load		
Relay	Mechanical	Min. 10,000,000 times		
life cycle	Electrical	Min. 100,000 times (250VAC 3A resisitive load)		
Memory protection		10 years(When using non-volatile semiconductor memory)		
Repeat error		Max. ±0.01% ±0.05sec		
SET error				
Voltage error				
Temperature error				
Insulation resistance		$100 \mathrm{M}\Omega$ (at $500 \mathrm{VDC}$ mega)		
Dielectric strength		2000VAC 50/60Hz for 1 minute		
Noise	AC power	±2kV the square wave noise(pulse width:1μs) by the noise simulator		
strength	DC power	$\pm 500 \text{V}$ the square wave noise(pulse width: $1\mu\text{s}$) by the noise simulator		
Vibration	Mechanical	0.75mm amplitude at frequency of 10 ~ 55Hz in each of X, Y, Z directions for 1hour		
Vibration	Malfunction	0.5mm amplitude at frequency of 10 ~ 55Hz in each of X, Y, Z directions for 10 minutes		
Shock	Mechanical	300m/s² (Approx. 30G) in X, Y, Z directions 3 times		
OHOCK	Malfunction	100m/s² (Approx. 10G) in X, Y, Z directions 3 times		
Ambient temperature		-10 ~ +55℃ (at non-freezing status)		
Storage temperature		-25 ~ +65 ℃ (at non-freezing status)		
Ambient humidity		35~85%RH		
Unit	AC power	Approx. 122g	Approx. 112g	
weight	DC power	Approx. 130g Approx. 120g		

B-33 Autonics


8 Pin Plug Digital Timer

■Connections

•FS4E

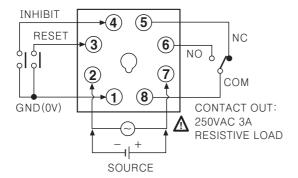


●FS5EI

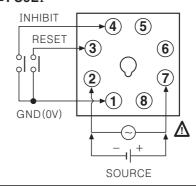


Input connections

OSolid-state input

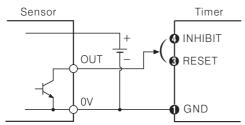


- ●Transistor ON → INHIBIT, RESET
- ●NPN open collector output sensor
- *Above numbers are terminal block.


Contact input

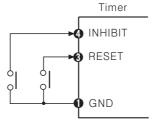

- Contact ON → INHIBIT, RESET
- Limit switch, Micro switch, Relay contact
- •Please use reliable contacts enough to flow 5VDC 1mA of current.


Dimensions

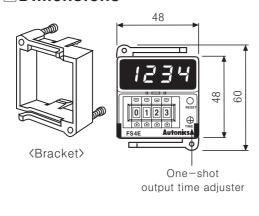

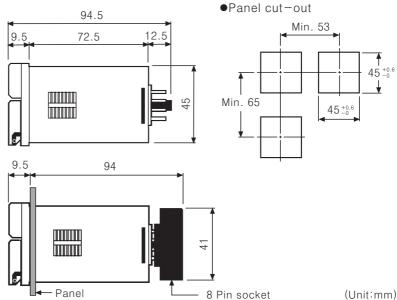

■Case detachment

Please cut off the power and detach the case from body.



Please widen the Lock of product with driver and push it toward the front panel with, it will be detached. **Please be careful of the injury cause by tools.

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/ Speed/ Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

> (J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller

(O) Graphic panel

(P) Field network device

(Q) Production stoppage models & replacement

Autonics B-34


: PG-08 (Sold separately)

■Time operation of indication type


●Up mode


RESET | INHIBIT | + Max.time range | 0

●Down mode

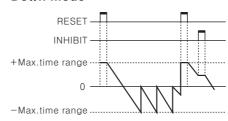

■ Description of inner DIP switches

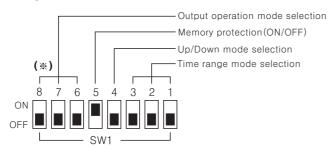



**In case of indicator(FS5EI), 5 Pin DIP switch is included, because there is no output operation mode.

*As upgraded model do not have unnecessary functions (No.5: Timer, No.6: NC), inner DIP switch is changed as 8 Pin.

●Up/Down mode

	SW1	Function	
	ON OFF	Down mode	
-	ON OFF	Up mode	

Memory protection

SW1		Function	
_	ON OFF	Disable the memory protection	
3	ON OFF	Enable the memory protection	


■Time range mode

Model SW1	FS4E	FS5EI
ON 1 2 3	99.99sec	9999.9sec
1 2 3 ON OFF	999.9sec	99999sec
1 2 3 ON	9999sec	9min 59.99sec
1 2 3 ON OFF	99min 59sec	99min 59.9sec
1 2 3 ON OFF	999.9min	9999.9min
1 2 3 ON OFF	99hour 59min	9hour 59min 59sec
1 2 3 ON OFF	999.9hour	999hour 59sec
1 2 3 ON OFF	9999hour	9999.9hour

B-35 Autonics

8 Pin Plug Digital Timer

■FS4E Output operation mode

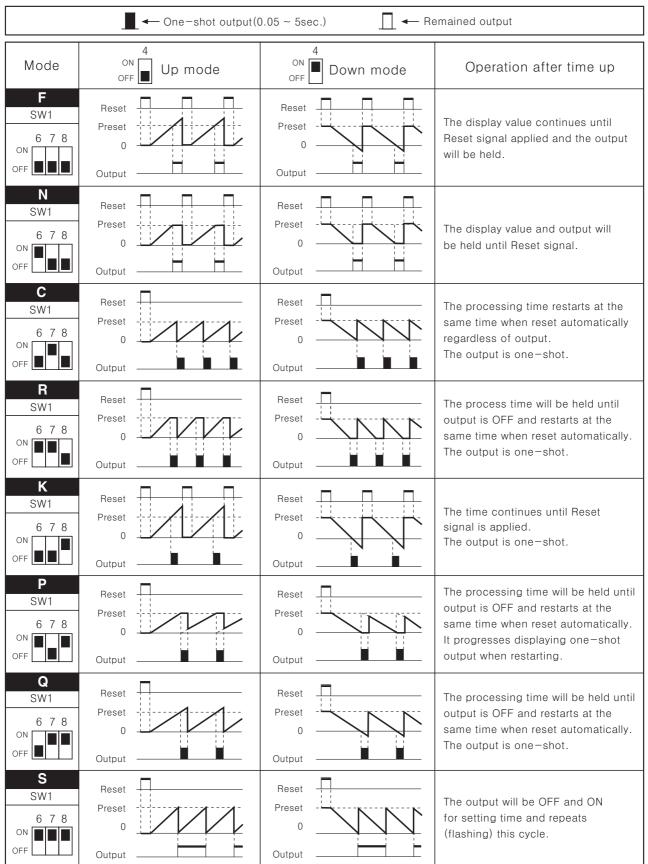

※ Time Up: When processing time reaches to setting time.

Autonics B-36

(A) Counter

> (B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/ Speed/ Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller

(O) Graphic panel

(P) Field network device

(Q) Production stoppage models & replacement

^{*}Applying reset signal after time up, it will display zero for up mode and time range for down mode(displaying max. value in case of indication type).

FSE Series


■Proper usage

OPreset value


Able to change setting value while it is running but setting value should be higher than previous setting value.

OPower

•The inner circuit voltage starts to rise up for the first 100ms after power on, the input may not work at this time. And also the inner circuit voltage drops down for the last 500ms after power off, the input may not work at this time.




- •Even though the power is applied, and the display does not turn on, please check the reset terminal.
- •Please supply the power within rated power and apply or cut the power quickly to prevent chattering.




OInput signal line

- •Shorten the cable distance between the sensor and this product.
- •Please use shield wire for input signal.
- •Please wire input signal line separated from power line.



©The reset signal width

It is reset perfectly when the reset signal is applied for max. 20ms regardless of the contact input & solid-state input.



(**)In case of a contact reset, it is reset perfectly if the ON time of reset signal is applied for max. 20ms even though a chattering is occured.

@Error

If setting value is "0000", "ErrO" will be displayed. If setting value is changed to non-zero, this function is cancelled. However, the output in the status of Error signal will be OFF.

*The indicator does not have Error display function.


ORESET

RESET has two function, which are memorizing DATA function and resetting output function.

When changing an inner selection switch, manual RESET or external RESET must be held after applying the power by all means. Otherwise, it will operate as previous mode. Selecting a RESET input/output mode again after applying power, please reset or reset manually, otherwise the previous mode will be operating.

©INHIBIT

- •When you need to check the real operating time, please use INHIBIT function.
- •If you need to stop the time progressing, please use INHIBIT function.

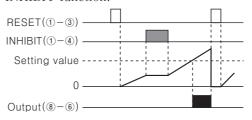

©Environment

Please avoid the following places:

- •Where this product may be damaged by strong impact or vibration.
- •Where there are corrosive gas or flammable gas and water, oil, dust.
- •Where magnetic and electrical noise occurs.
- •Where there are High temperature and humidity beyond the rated specification.
- •Where there are strong alkalis and acids.
- •Where there are direct rays of sun.

ONoise

- •We test 2kV, Pulse width 1µs against Impulse voltage between power terminals and 1kV, pulse width 1µs at noise simulator against external noise voltage. Please install MP condensor(0.1~1µF) or oil condensor between power teminals when over Impulse noise voltage occurs.
- When testing dielectric voltage and insulation resistance of the control panel with this unit installed.
- ①Please isolate this unit from the circuit of control panel.
- ②Please make all terminals of this unit short—circuited.
- •Sudden function stop while it is running (When displaying wrong numbers or nothing)
 In this case, please power off and turn on again.
 This is due to strong noise flows into this product therefore please try to separate inductive load from input signal line of this product or install surge absorber between inductive loads.

B-37 Autonics