
TPS20 Series

Features

- 4-20 mA analog signal (2-wire) transmission by measuring pressure of gas, liquid, and vapor
- High accuracy(±0.3%F.S.) with stainless steel diaphragm for various measurement
- Various model for installation environments
 : Head type, DIN connector type,
 Connector cable type
- Built-in zero-point, span adjustment (Head type)



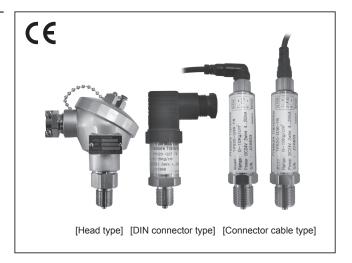

Ordering information

TPS20]_	G	1	1	F8	(0 to 5kgf/cm ²)
1		2	3	4	(5)	6

Item	Description	on				
①Item	TPS20	Pressure Transmitter				
@M	G	Gauge pressure				
②Measurement presssure	Α	Absolute pressure				
	1	Head type				
③Connector	2	DIN connector type				
	3	Connector cable type				
		Gauge pressure	Absolute pressure			
	1	0 to 0.2 kgf/cm ²	_			
	2	0 to 0.5 kgf/cm ²	_			
	3	0 to 1 kgf/cm ²	0 to 1 kgf/cm ²			
	4	0 to 2 kgf/cm ²	0 to 2 kgf/cm ²			
	5	0 to 7 kgf/cm ²	0 to 7 kgf/cm ²			
	6	0 to 10 kgf/cm ²	0 to 10 kgf/cm ²			
	7	0 to 20 kgf/cm ²	0 to 20 kgf/cm ²			
	8	0 to 20 kgf/cm ²	0 to 20 kgf/cm ²			
	9	0 to 70 kgf/cm ²	_			
4 Pressure range	A	0 to 100 kgf/cm ²	_			
	С	0 to 200 kgf/cm ²	_			
	F	0 to 200 kgf/cm ²	_			
	Н	0 to 350 kgf/cm ²	_			
	M	-760 mmHg to 0 kgf/cm ²	_			
	0	-760 mmHg to 1 kgf/cm ²	_			
	Q	-760 mmHg to 7 kgf/cm ²	_			
	V	-760 mmHg to 10 kgf/cm ²	_			
	X	-760 mmHg to 20 kgf/cm ²	_			
	Υ	-760 mmHg to 35 kgf/cm ²	_			
	Z	Others				
	P2	PT 1/2 (with adapter)				
© Dracesure next	P8	PT 3/8 (with adapter)				
⑤Pressure port	F8	PF 3/8 (Standard)				
	ZZ	Others				
©User pressure range		User pressure range*1				

^{×1:} Write the desired pressure range and it is the default of user pressure range.(③ Select "Z" at pressure range)

Pressure Transmitter

• I type

Ø22

Dimensions

• Head type

• DIN connector type



• L type

B. Indicator

(unit:mm)

(unit: mm)

C. Converter

A. Recorder


D. Controller

E. Thyristor unit

F. Pressure transmitter

G. Temp. transmitter


H. Accessories

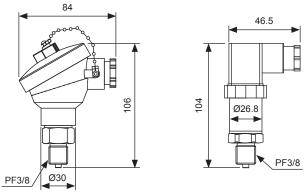

% The standard pressure port for above is PF 3/8.

Cable(sold seperately)


• CID3-2 / CID3-5

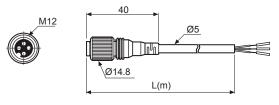

Model	L(m)	Meterial
CID3-2	2	PVC
CID3-5	5	FVC

• CLD3-2 / CLD3-5

PF3/8

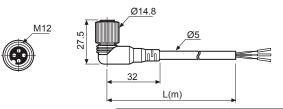

Model	L(m)	Meterial
CID3-2	2	PVC
CID3-5	5	PVC

TPS20


KT-302H

PTF30

Connections

Head type		DIN connector type			Connector cable type		
	Pin		Pin	Function		Pin	Function
			1	+	02 0	1	+
	+	~ O(4)	2	_		2	N-C
A DEL		2 =	3	N-C	40//	3	F.G.
	_		(±)	F.G.		4	_



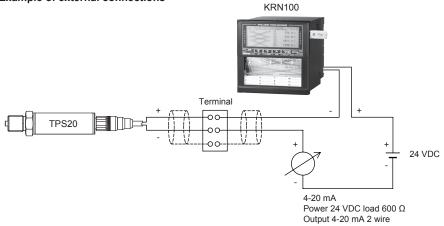

TPS20 Series

Specifications

Series		TPS20			
Measured materials		Vapor, Liquid, Fluid (except corrosive environment of SUS316)			
Measurement range		-760 mmHg to 0 to 30 kg/cm² (compound pressure) 0 to 0.2 to 350 kg/cm² (gauge pressure) 0 to 1.0 to 35 kg/cm² (absolute pressure)			
Allowable over pressure		300% of max. span			
	Power	15-35 VDC			
Electrical	Output	4-20 mA			
characteristics	Load resistance	Min. 600 Ω			
	Power consumption	0.5 W			
Accuracy	Linearity	±0.3%F.S.(-10 to 50 °C) ±0.5%F.S.(50 to 70 °C)			
	Hysteresis	±0.3% F.S.			
Temperature	ZERO	±0.03%F.S.			
characteristics	SPAN	±0.03%F.S. (at 25 °C)			
Response tim	e	Max. 100 ms			
Pressure port		PF 3/8(standard), PT 3/8, PT 1/2			
Environment	Ambient temperature	-10 to 70 °C			
	Ambient humidity	5 to 95% RH			
Materials		Sealing : SUS316, O-ring : fluoro rubber, Diaphragm : SUS316, Connection : SUS316			
Case structure		Drip-proof structure			
Approval		C€			
Unit weight		Approx. 320 g (based on head type)			

 $[\]ensuremath{\mathbb{X}}$ F.S.(Full Scale): It is rated pressure range.

Troubleshooting

Error	Troubleshooting		
	Do you supply the power?		
No outputs	Do you wire (+, -) it correctly?		
	Is the connection part poor?		
	Is power supplied properly?		
Abnormally fluctuating output	Is pressure supplied correctly?		
	Is there error in pressure line?		
	Is power supplied properly?		
Out of more maint authorit value	Is the load resistive value of a receiver over 600 Ω ?		
Out of zero point output value	Is the measuring point and transmission distance proper?		
	Is line resistance big? (max. 600 Ω)		

Pressure Transmitter

Proper usage

■ Caution for using

- When installing this unit on pipe line, use the hexagon part of connections not to turn this unit with a pipe wrench. Do not use this unit with strong vibrations.
- This unit is manufactured with precisely. If you drop or shock this unit, it may lose the function. Please treat this unit carefully.
- Store this unit at the place without moisture, dust, and vibration.
- This product which does not have drive part at sensing part does not need to repair it. Even though inside of pressure pipe is normally clean, it needs to take maintenance once a year as belows.
 - ① Check the broken status of outside.
 - ② Check the pressure slot, cleanliness inside, and corrosion state.
 - $\center{3}$ Short each terminal and check the insulation resistance between the case and power. (at 100 VDC, over 10 M Ω)
 - ④ Check zero, span adjustment and linearity by pressure standards.
- When removing a sensor for maintenance, follow the belows.
 - 1 Replace an O-ring which is used once.
 - ② Be sure that diaphragm part is not damaged.
- In case of head type for connecting the power, use a crimp terminal(M3.5, min. 7.2 mm).
- The connection of this unit should be separated from the power line and high voltage line in order to prevent inductive noise.

- Install a power switch or a circuit breaker to supply or cut off the power.
- Switch or circuit breaker should be installed nearby users for convenient control.
- Do not use this unit near the high frequency instruments (high frequency welding machine & sewing machine, large capacity SCR controller).
- This unit cannot be repaired due to disassembled structure.
- This unit is fixed with bolt and nut at the both sides of case. Do not press excessive load (approx. 300kg/cm²), or it may cause damage to this unit.
- Tighten lever of electrical connection firmly for spinning not to enter water to cable.
- · Installation environment
 - 1 Indoor / Outdoor
 - ② Altitude max. 2,000 m
 - ③ Pollution Degree 2
 - Installation Category II

A. Recorder

B. Indicator

C. Converter

D. Controller

E. Thyristor unit

F. Pressure transmitter

G. Temp. transmitter

H. Accessories

TPS20

KT-302H

PTF30